

Mister-Comfort Marine Hard Top Installation



Misting heads located on either side of overhead compartment






Two misting heads located on backside of hardtop





Misting Pump and ¾ inch water pickup Tee locations

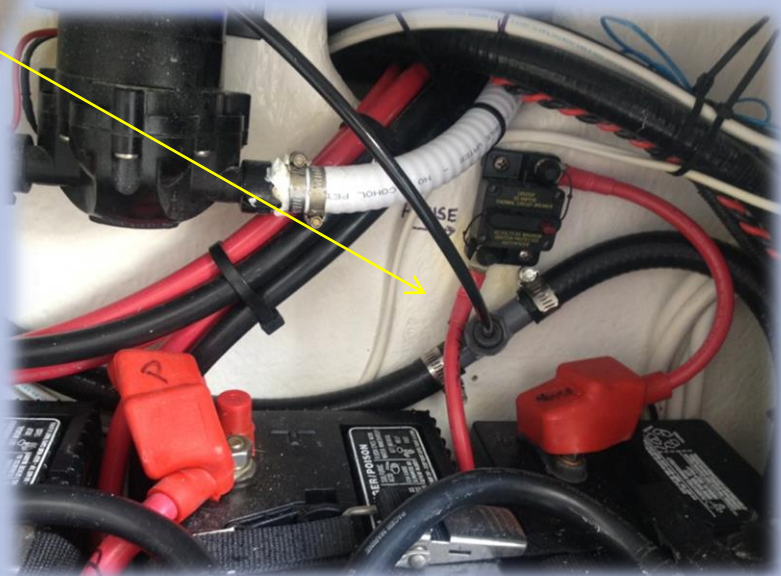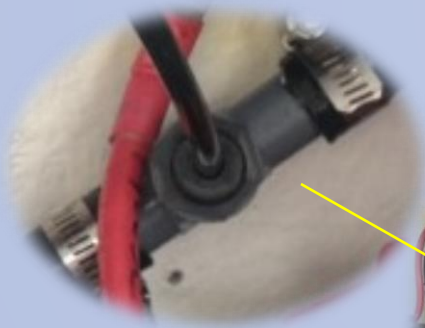

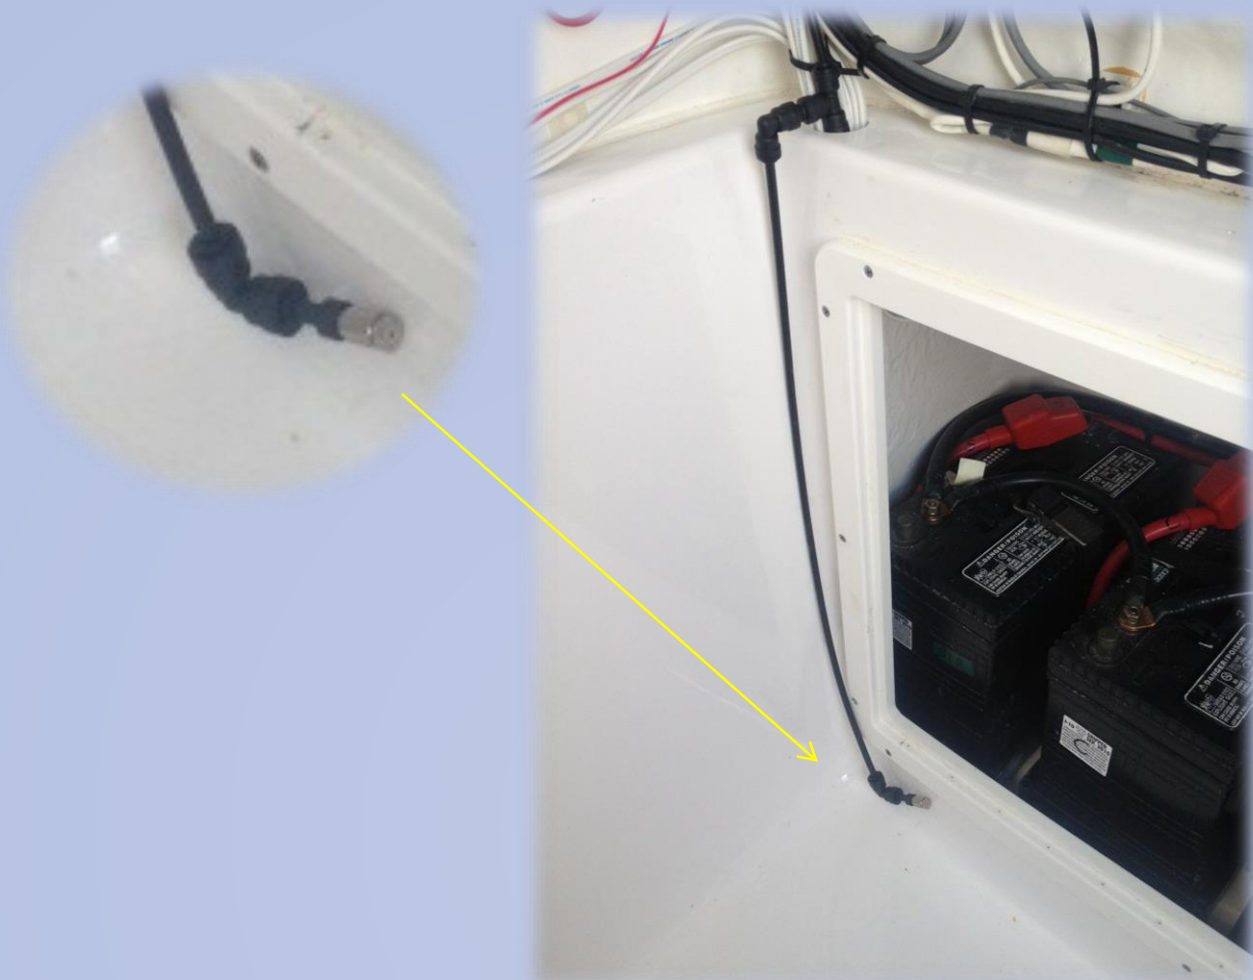

Automatic Drain Valve is located outside battery compartment secure in place and direct water by use of 3/8" clear tubing



(888) 647-8370
www.Mister-Comfort.com